
Contents

License Agreement for Machine Code	iii
Statement of Limited Warranty	iv
About This Book	xiii
Related Publications	xiii

Part 1. 7587 Industrial Computer Information

Chapter 1. Overview of the 7587 Industrial Computer	1-1
General Layout of Components	1-2
Specifications	1-3
Power Supply	1-4
Heat Output	1-4
Environment	1-4
Agency and Standards Compliance	1-4
Chapter 2. Installing Your System Unit	2-1
Before You Begin	2-1
Task 1. Unpack Your System Unit	2-1
Task 2. Check the Voltage Setting	2-1
Task 3. Install Internal Options	2-2
Task 4. Secure the System Unit	2-2
Task 5. Connect the Cables	2-2
Task 6. Perform Power-Up and Check-Out Procedure	2-3
Task 7. Run the Configuration/Setup Utility Program	2-4
Task 8. Finish the Installation	2-4
Chapter 3. Installing Options	3-1
Switching Off Power and Disconnecting Cables	3-1
Opening the System Unit	3-2
Removing the SBC	3-2
System Memory (SIMMs)	3-3
Installing SIMMs	3-4
Installing Cache Memory	3-6
Installing a PMC Card	3-7
Reinstalling the SBC	3-7
Installing Adapters	3-8
Installing the Card Hold-Down Spacers	3-9
Installing an Internal Hard Drive	3-10
Chapter 4. Operating and Configuring Your System Unit	4-1
Operator Information	4-1
Cleaning Air Filters	4-2
Starting Up Your System	4-2
Installing Application Programs	4-3
Security Features	4-3
Startup-Sequence Control	4-4
Keyboardless Operation Mode	4-4
Configuration Information	4-5

Using the Configuration/Setup Utility Program	4-6
Device Drivers	4-22
Interrupt and DMA Assignments	4-23
Jumpers and Switches	4-24
Memory-Retention Battery	4-24
Serial Port	4-25
Parallel Port	4-26
Universal Serial Bus	4-28
Watchdog Timer and Thermal Monitor	4-29
SVGA Video	4-29
System Programs	4-31
Chapter 5. Solving Problems	5-1
Diagnostic Tools	5-1
Testing the System Unit	5-2
Starting the System Unit	5-2
Starting the Diskette-Based Diagnostic Program	5-3
Troubleshooting Charts	5-4
Error Messages	5-9
POST Messages	5-10
Diagnostic Messages	5-13

Part 2. Single Board Computer Information

Chapter 6. Single Board Computer	6-1
586 and 586E SBC Component Layout	6-2
586U and 586EU SBC Component Layout	6-3
Memory Subsystem	6-4
Indicators	6-4
I/O Connectors	6-6
Miscellaneous Connectors	6-13
Jumpers and Switches	6-15
Configuration Switch	6-16

Part 3. Analog Video PMC Form Factor Card Information

Chapter 7. Analog Video PMC Form Factor Card	7-1
---	------------

Part 4. Hardware Maintenance Information

Chapter 8. Service Information	8-1
Configuration/Setup Utility Program	8-1
Downloading System Support Programs and BIOS Updates	8-2
Vital Product Data	8-2
Flash (BIOS/VPD) Update Procedure	8-2
Diagnostic and Test Tools	8-3
Power-On Self-Test (POST)	8-3
Error Messages	8-4
QAPLus/PRO Diagnostic Program	8-5
General Checkout	8-10
Keyboard	8-12

USB Ports	8-14
Printer	8-16
Power Supply	8-16
Backplane Power-Supply Connections	8-17
Display	8-18
Symptom-to-FRU Index	8-18
Beep Symptoms	8-19
No Beeps	8-20
Numeric Error Codes	8-21
Error Messages	8-25
Miscellaneous Symptoms	8-30
Hard Disk Drive Boot Error	8-32
Undetermined Problem	8-32
Removal and Replacement Procedures	8-33
Removing Power and Disconnecting Cables	8-33
Removing the System Unit Cover	8-34
Removing and Replacing Adapters	8-34
Removing and Replacing a Diskette Drive	8-35
Removing and Replacing a Hard Disk Drive	8-36
Removing and Replacing the Power Supply	8-36
Removing and Replacing the Front Fan	8-37
Removing and Replacing the LED Assembly	8-38
Removing and Replacing the Power Switch	8-39
Removing and Replacing the IBM SBC	8-39
Replacing the Processor	8-42
Replacing a Video PMC Card or Keyboard/Mouse Cable	8-45
Removing and Replacing the Backplane	8-46
 Chapter 9. Parts Catalog	 9-1
IBM Service Parts Warranty	9-1
Backplane and Cables	9-2
Hard Disk and Diskette Drives	9-4
Top Cover	9-5
Bottom Cover and IBM SBC	9-6
Fans and Filters	9-7
Mouse	9-9
Keyboards	9-9
Power Cords	9-10

Part 5. Appendixes

Appendix A. System Records	A-1
Appendix B. Physical Dimensions	B-1
Appendix C. Jumpers, Switches, and Pin Assignments	C-1
Hard Disk Drive Jumper Settings	C-2
Backplane Connectors	C-4
SBC Connectors	C-5
SBC Settings	C-6
Serial Port Pin Assignments	C-8
 Appendix D. Interrupt and DMA Assignments	 D-1

Interrupt Request Assignments	D-1
DMA Channel Assignments	D-2
Appendix E. S3 Trio64V+ Super VGA Driver Installation	E-1
Default Resolutions	E-1
Operating Systems	E-1
Selecting a Monitor Using the Configuration/Setup Utility Program	E-2
Installing Windows 3.1 Video Drivers	E-2
Alternative Method for Changing Resolutions	E-3
Updating the Windows 3.1 Video Driver	E-3
Installing Windows 95 Video Drivers	E-4
Alternative Method for Changing Resolutions	E-4
Installing Windows NT Video Drivers	E-5
Installing OS/2 and OS/2 Warp Video Drivers	E-5
Installing Video Drivers for CAD Panacea	E-6
Installing Video Drivers for MicroStation PC	E-7
Appendix F. Notices	F-1
Trademarks and Service Marks	F-1
Required Electronic Emission and Connectivity Notices	F-2
Class A Federal Communications Commission Statement	F-2
Industry Canada Compliance Statement	F-2
United Kingdom	F-2
European Union (EU) Electromagnetic Compatibility Directive	F-2
Germany	F-3
Japan	F-4
Korea	F-4
Taiwan	F-4
Safety Notices (Multi-Lingual Translations)	F-5
Safety Information	F-11
General Safety	F-11
Electrical Safety	F-12
Safety Inspection Guide	F-15
Handling Electrostatic-Discharge-Sensitive Devices	F-16
Grounding Requirements	F-16
Laser Compliance Statement	F-16
German Power Switch Statement	F-17
Power Cord Notice	F-17
Index	X-1

Figures

1-1.	IBM 7587 Industrial Computer	1-1
1-2.	General Component Layout 1	1-2
1-3.	General Component Layout 2	1-3
4-1.	Configuration/Setup Utility Main Screen	4-8
4-2.	Example System Summary Screen	4-9
4-3.	Example Product Data Pop-Up	4-9
4-4.	Example PCI Bus 0 Master Data Pop-Up	4-10
4-5.	Example Devices and I/O Ports Screen	4-10
4-6.	Example Serial Port Setup Screen	4-11
4-7.	Example Parallel Port Setup Screen	4-11
4-8.	Example Video Setup Pop-Up	4-12
4-9.	IDE Drives Setup Pop-Up	4-13
4-10.	Example Hard Disk Drive 0 Pop-Up	4-13
4-11.	Example Date and Time Pop-Up	4-14
4-12.	System Security Pop-Up	4-14
4-13.	Example Secure Hard Disk Drives and Diskette Drives Pop-Up	4-15
4-14.	Power-on Password Pop-Up	4-15
4-15.	Administrator Password Pop-Up	4-15
4-16.	Example Start Options Pop-Up	4-16
4-17.	Advanced Setup Pop-Up	4-17
4-18.	Cache Control Pop-Up	4-18
4-19.	Example ROM Shadowing Pop-Up	4-18
4-20.	ISA Legacy Resources Pop-Up	4-19
4-21.	Example Memory Resources Pop-Up	4-19
4-22.	Example I/O Port Resources Pop-Up	4-20
4-23.	Example DMA Resources Pop-Up	4-20
4-24.	Example Interrupt Resources Pop-Up	4-21
4-25.	Advanced Power Management	4-21
4-26.	Automatic Hardware Power Management	4-22
4-27.	Activity Monitor	4-22
6-1.	586 and 586E SBC Component Layout	6-2
6-2.	586U and 586EU SBC Component Layout	6-3
6-3.	Processor Voltage Selection Jumpers	6-15
7-1.	PMC video card Connectors	7-1
8-1.	Removing and Replacing the LED Assembly	8-38
9-1.	Backplane and Cables	9-2
9-2.	Hard Disk and Diskette Drives	9-4
9-3.	Top Cover	9-5
9-4.	Bottom Cover and IBM SBC	9-6
9-5.	Fans and Filters	9-7
B-1.	Front View	B-1
B-2.	Top View	B-2
C-1.	Connectors on the 586 and 586E SBCs	C-5
C-2.	Connectors on the 586U and 586EU SBCs	C-5
C-3.	Processor Voltage Selection Jumpers	C-6

